

**Notes**  
This is '04 Wiring  
Need '05 Wiring

**Air Suspension Module**

AIR SUSP EXHAUST VALVE CTRL	1	YEL	3P
RR AIR SUSP VALVE CTRL	2	YEL	3D
5VOLT REF	3	YEL	3A
RR AIR SUSP SEN SIG	4	YEL	3C
LR AIR SUSP SENS SIG	5	YEL	3B
RIGR HEIGHT SW SIG	6	YEL	3G
LO REF	7	YEL	2D
N&D	8	YEL	2B
9			
CLASS 2 SERIAL DATA	10	YEL	3J
AIR SUSP PRESS SENS SIG	11	YEL	3K
BATT+	12	YEL	1B
AIR SUSP RLY CTRL	13	YEL	3M
LR AIR SUSP VALVE CTRL	14	YEL	3N
RIDE HEIGHT ACTIVE IND	15	YEL	3E
INFLATOR SW IND CTRL	16	YEL	3D
INFLATOR SW SIG	17	YEL	3H
OVERTEMP SIG	18	YEL	2L
LOW REF	19	YEL	2E
INFLATOR SW LO REF	20	YEL	2C
IGN 3 VOLT	21	YEL	3F
22			
AIR SUSP RLY GND	23	YEL	3R
24			
C1			

AIR SUSPENSION MODULE  
(NEAR RIGHT FRONT OF COMPRESSOR)

