



Important: The turn signal multifunction switch and Inflatable restraint steering wheel module coil ar serviced as an assembly.

- 1. Remove the steering wheel. Refer to <u>Steering Wheel Replacement</u>.
- 2. Remove the steering column trim covers. Refer to Steering Column Trim Cover Replacement.
- 3. Disconnect any electrical connectors and remove the wiring harness from any retainers as needed.

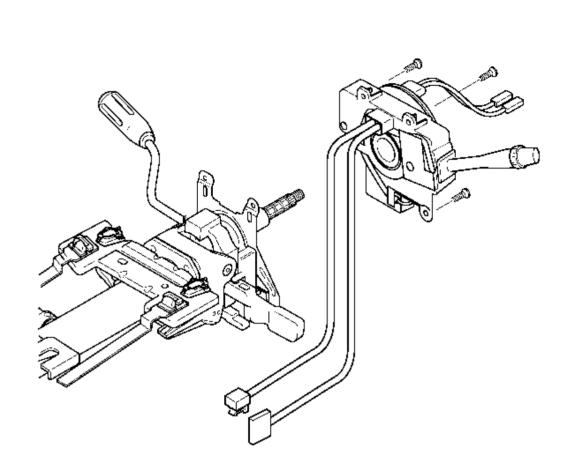

4. Remove the turn signal multifunction switch bolts.5. Slide the multifunction turn signal switch off of the steering column.

Installation Procedure

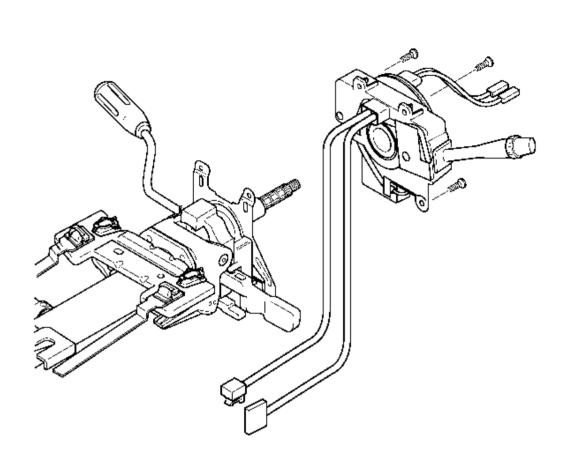

Important: A new multifunction turn signal switch will come precentered with a centering tab attache NOT remove the centering tab until installation is complete. Failure to follow procedure will cause a misalignment of the multifunction turn signal switch and centering will be required.

If reusing the existing multifunction turn signal switch, you must center it. Refer to <u>Inflatable Restraint</u> <u>Steering Wheel Module Coil Centering</u>.


1. Slide the multifunction turn signal switch onto the steering column.

Notice: Refer to <u>Fastener Notice</u>.

2. Install the multifunction turn signal switch bolts.

Tighten:

Tighten the bolts to 4.5 [n-m] (40 lb in).

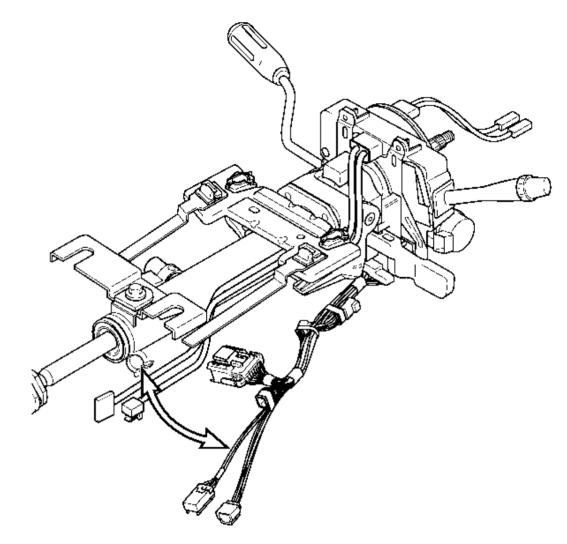

- 3. Connect any electrical connectors and install the wiring harness through any retainers as needed.
- 4. Remove the centering tab from the multifunction turn signal switch.
- 5. Install the steering column trim covers. Refer to <u>Steering Column Trim Cover Replacement</u>.
- 6. Install the steering wheel. Refer to <u>Steering Wheel Replacement</u>.

"Portions of materials contained herein have been reprinted with permission of General Motors Corporation, and Parts Operations" License Agreement #0410810.

Copyright 2007 - 2012 Service Repair Solutions, Inc.