


Connector Part Information		<ul style="list-style-type: none"> <li>• 12129136</li> <li>• 4-Way F Metri-Pack 150 Series (BK)</li> </ul>		Connector Part Information		<ul style="list-style-type: none"> <li>• 12129135</li> <li>• 4-Way M Metri-Pack 150 Series (BK)</li> </ul>	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	D-BU	211	Passenger Seat Lumbar Motor Forward Control	A	D-BU	211	Passenger Seat Lumbar Motor Forward Control
B	WH	210	Passenger Seat Lumbar Motor Rearward Control	B	WH	210	Passenger Seat Lumbar Motor Rearward Control
C	OG	2462	Passenger Seat Bolster Motor Forward Control	C	D-BU	2462	Passenger Seat Bolster Motor Forward Control
D	PK	2427	Passenger Seat Bolster Motor Rearward Control	D	L-BU	2427	Passenger Seat Bolster Motor Rearward Control

### C380 Body Harness to Right Rear Seat Harness

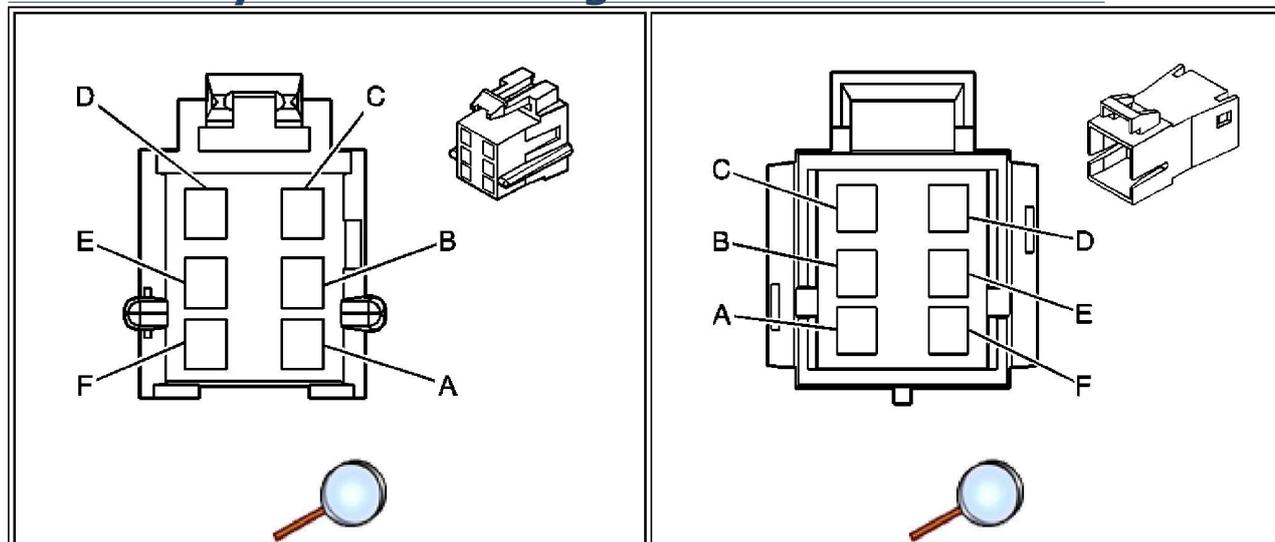

Connector Part Information		<ul style="list-style-type: none"> <li>• 12064752</li> <li>• 6-Way F Metri-Pack 280 Series (BK)</li> </ul>		Connector Part Information		<ul style="list-style-type: none"> <li>• 12064754</li> <li>• 6-Way M Metri-Pack 280 Series (BK)</li> </ul>	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	OG	4540	Battery Positive Voltage	A	OG	4540	Battery Positive Voltage
B	BK	1150	Ground	B	BK	1150	Ground
C	BN	541	Ignition 3 Voltage	C	BN	541	Ignition 3 Voltage
D	BN	1634	Right Rear Heated Seat Switch Signal	D	BN/WH	1634	Right Rear Heated Seat Switch Signal
E	PK	1631	Right Rear Heated Seat Low Indicator Control	E	PK	1631	Right Rear Heated Seat Low Indicator Control
F	BK/WH	1638	Right Rear Heated Seat High Indicator Control	F	BK/WH	1638	Right Rear Heated Seat High Indicator Control

### C390 Body Harness to Right Rear Door Harness

<b>Connector Part Information</b>		<ul style="list-style-type: none"> <li>• 12177259/12177260</li> <li>• 10-Way F and 7-Way F Metri-Pack GT 150 Series (BK)</li> </ul>		<b>Connector Part Information</b>		<ul style="list-style-type: none"> <li>• 12177258</li> <li>• 17-Way M Metri-Pack Connectors Mixed Series (WH)</li> </ul>	
Pin	Wire Color	Circuit No.	Function	Pin	Wire Color	Circuit No.	Function
A	GY/BK	1186	Power Window Relay Right Rear Up Control	A	GY/BK	1186	Power Window Relay Right Rear Up Control
B	D-GN	1188	Power Window Relay Right Rear Down Control	B	D-GN	1188	Power Window Relay Right Rear Down Control
C	L-GN	2266	Power Window Lockout Right Rear Signal	C	L-GN	2266	Power Window Lockout Right Rear Signal
D	--	--	Not Used	D	--	--	Not Used
E	BN/WH	230	Instrument Panel Lamps Dimming Control	E	BN/WH	230	Instrument Panel Lamps Dimming Control
F	BK	1250	Ground	F	BK	1250	Ground
G	OG	1340	Battery Positive Voltage	G	OG	1340	Battery Positive Voltage
H	L-GN/BK	748	Right Rear Door Ajar Switch Signal	H	L-GN/BK	748	Right Rear Door Ajar Switch Signal
J	GY/BK	690	Courtesy Lamp Supply Voltage	J	GY/BK	690	Courtesy Lamp Supply Voltage
K	L-BU	115	Right Rear Speaker Output (-)	K	L-BU	115	Right Rear Speaker Output (-)
L	D-BU	46	Right Rear Speaker Output (+)	L	D-BU	46	Right Rear Speaker Output (+)
M	BK	1250	Ground	M	BK	1250	Ground
N	TN	294	Door Lock Actuator Unlock Control	N	TN	294	Door Lock Actuator Unlock Control
			Door Lock Actuator				Door Lock Actuator