



Tailgate Lock Adjustment

Slightly loosen #10 hex nuts about 1-1/2 turns. Be careful not to over loosen or retightening may become difficult. Slide lock assembly to achieve dimension shown below.

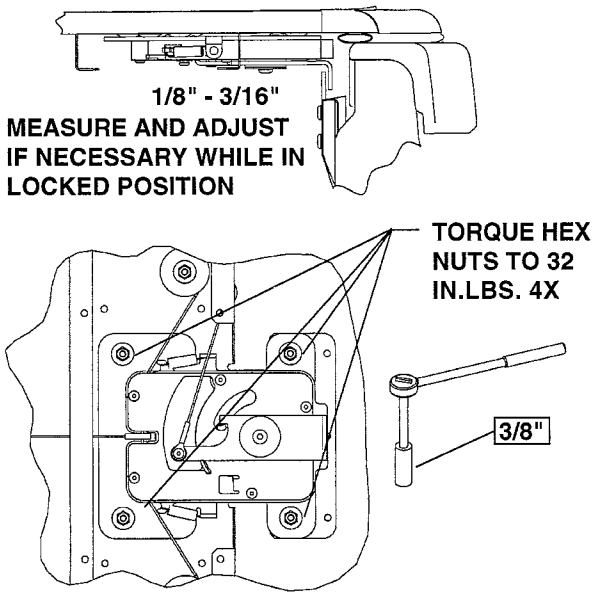



Release Cable Adjustment

1. Close slam latch catch arms (both sides).
2. Adjust hex barrel until cable is taut. Stop adjusting hex barrel when latch release arms start pulling inward.
3. Open and close cover several times to ensure lock/release system is functioning properly.
4. Tighten jam nuts against hex barrel.

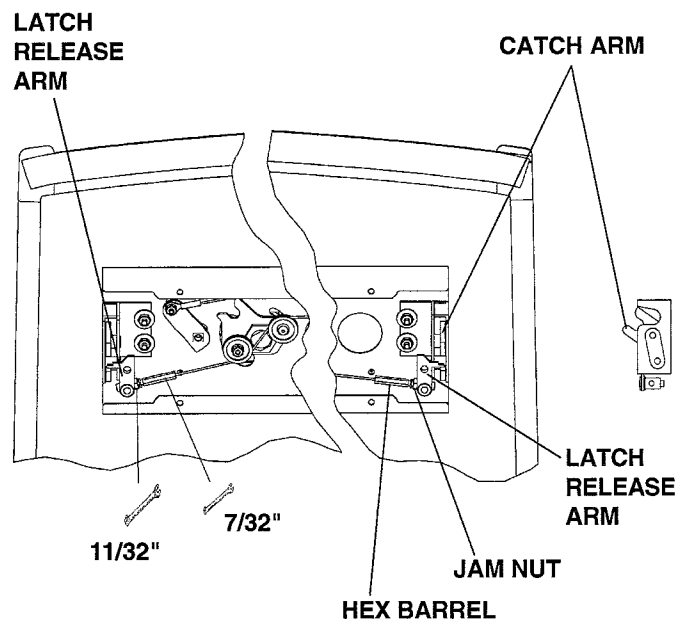

At each location and one at a time:

1. Prep surface with isopropyl alcohol.
2. Prep surface with adhesion promoter (Item Z).
3. Peel film off tape side of seal, discard film.
4. Locate, orient, and install seals as indicated.

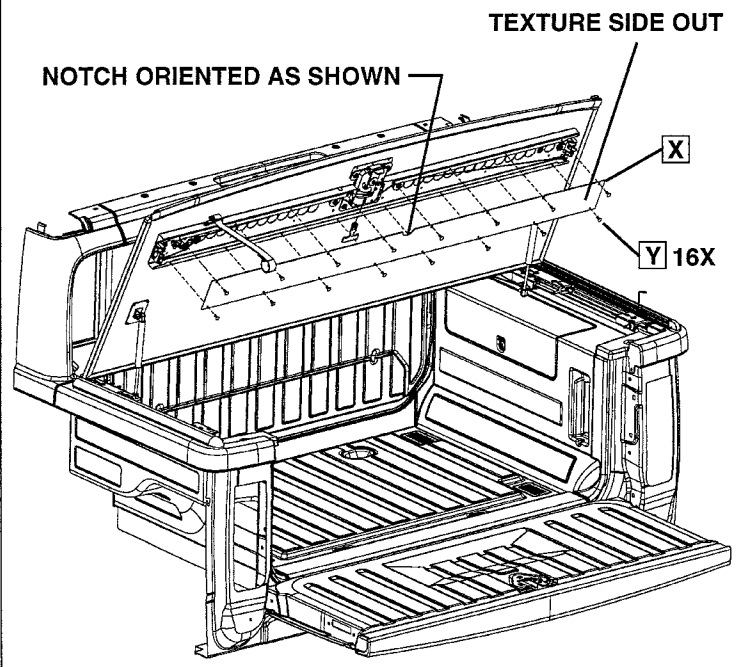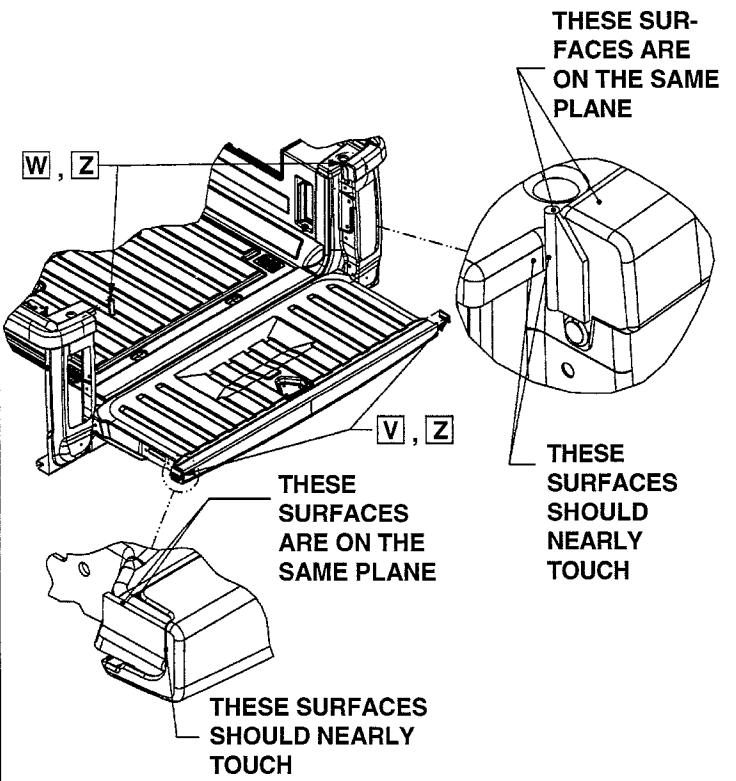

Tonneau Cover

IR 19OC05 PART NO. **88965272** SHEET **6** OF **18**

ALL INFORMATION WITHIN ABOVE BORDER TO BE PRINTED EXACTLY AS SHOWN ON 8.5 x 11 WHITE 16 POUND NON-BOND RECYCLABLE PAPER. PRINT ON BOTH SIDES, EXCLUDING TEMPLATES. TO BE UNITIZED IN ACCORDANCE WITH GMSPO SPECIFICATIONS.	DATE	REVISION	AUTH	DR

TITLE	
INSTALLATION INSTRUCTIONS	
Tonneau Cover	
PART NO.	SHEET
88965272	6 OF 18